


# Templates

## Preparation of Bottom Latch for SVR/3PT

Bottom Latch & 227 Strike

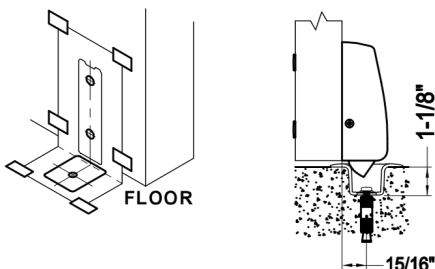

Bottom Latch & 224 Strike



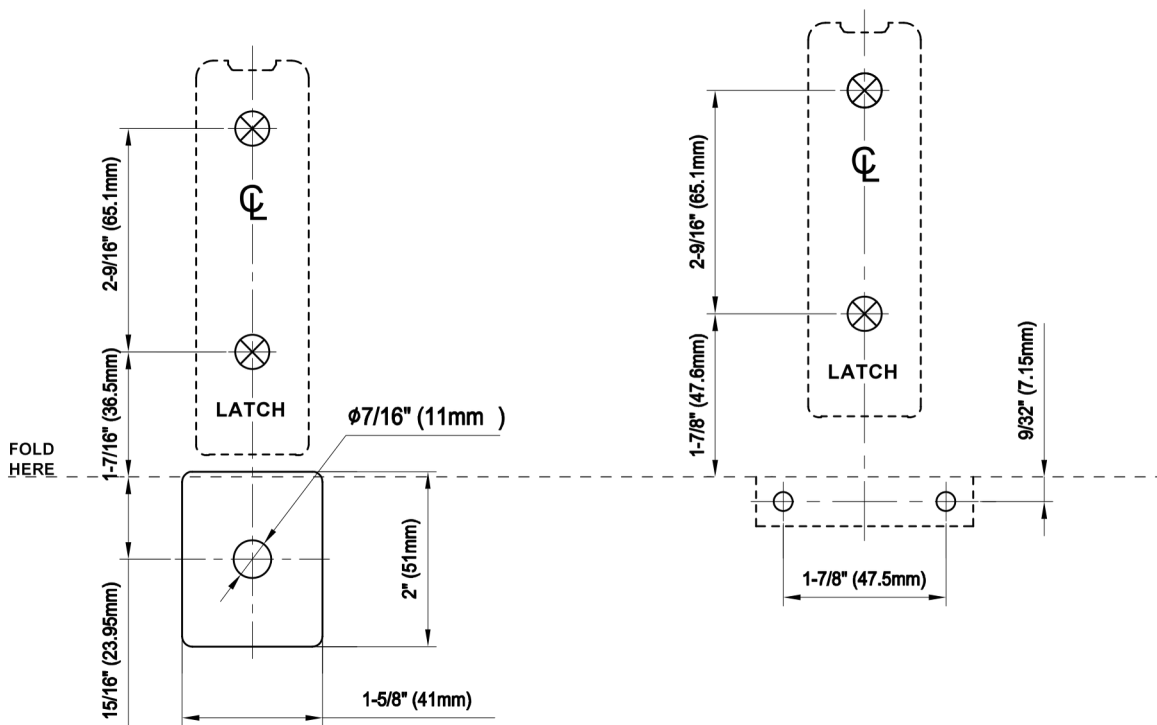


Illustration	Applications	Dimension	
		Metal	Wood
○	Strike Screw	#25 Drill #10-24 Tap	1/8" (3mm) Drill Pilot 1" Deep
⊗	Sex Bolt	5/16" (8mm) Drill (Device Side) 13/32" (10.3mm) Drill (Outside)	

# Templates

## Preparation of Bottom Latch for SVR/3PT

Bottom Latch & 225 Strike

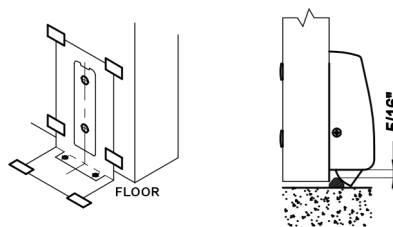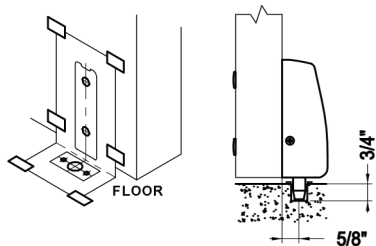

Bottom Latch & 226 Strike

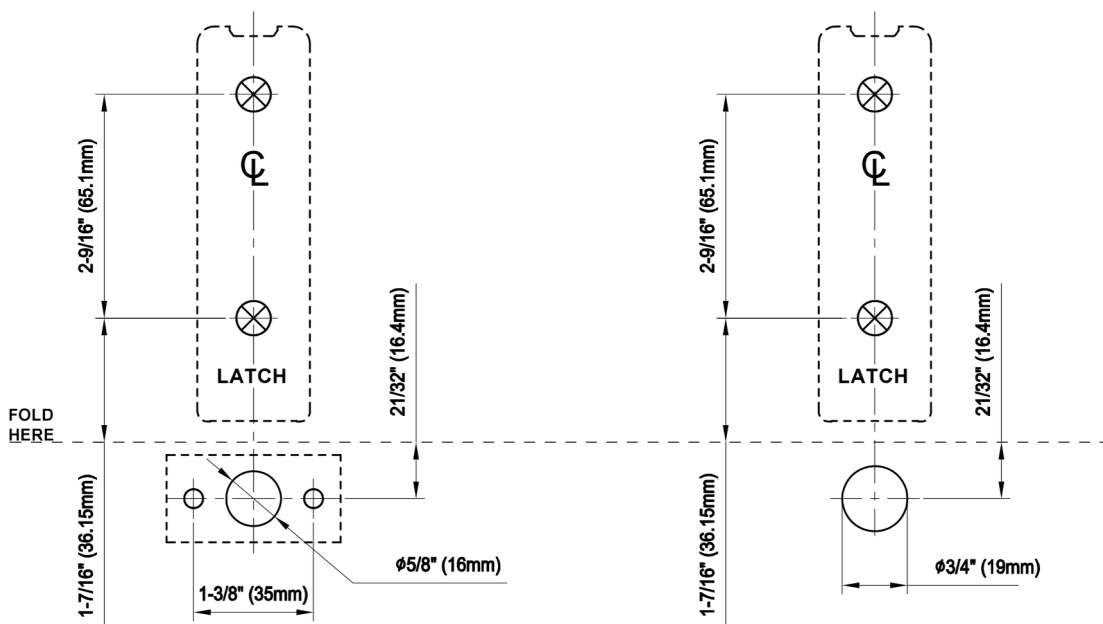
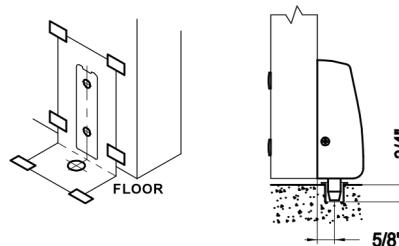


Illustration	Applications	Dimension	
		Metal	Wood
○	Strike Screw	#25 Drill #10-24 Tap	1/8" (3mm) Drill Pilot 1" Deep
⊗	Sex Bolt	5/16" (8mm) Drill (Device Side) 13/32" (10.3mm) Drill (Outside)	