


Templates

Preparation for Mortise

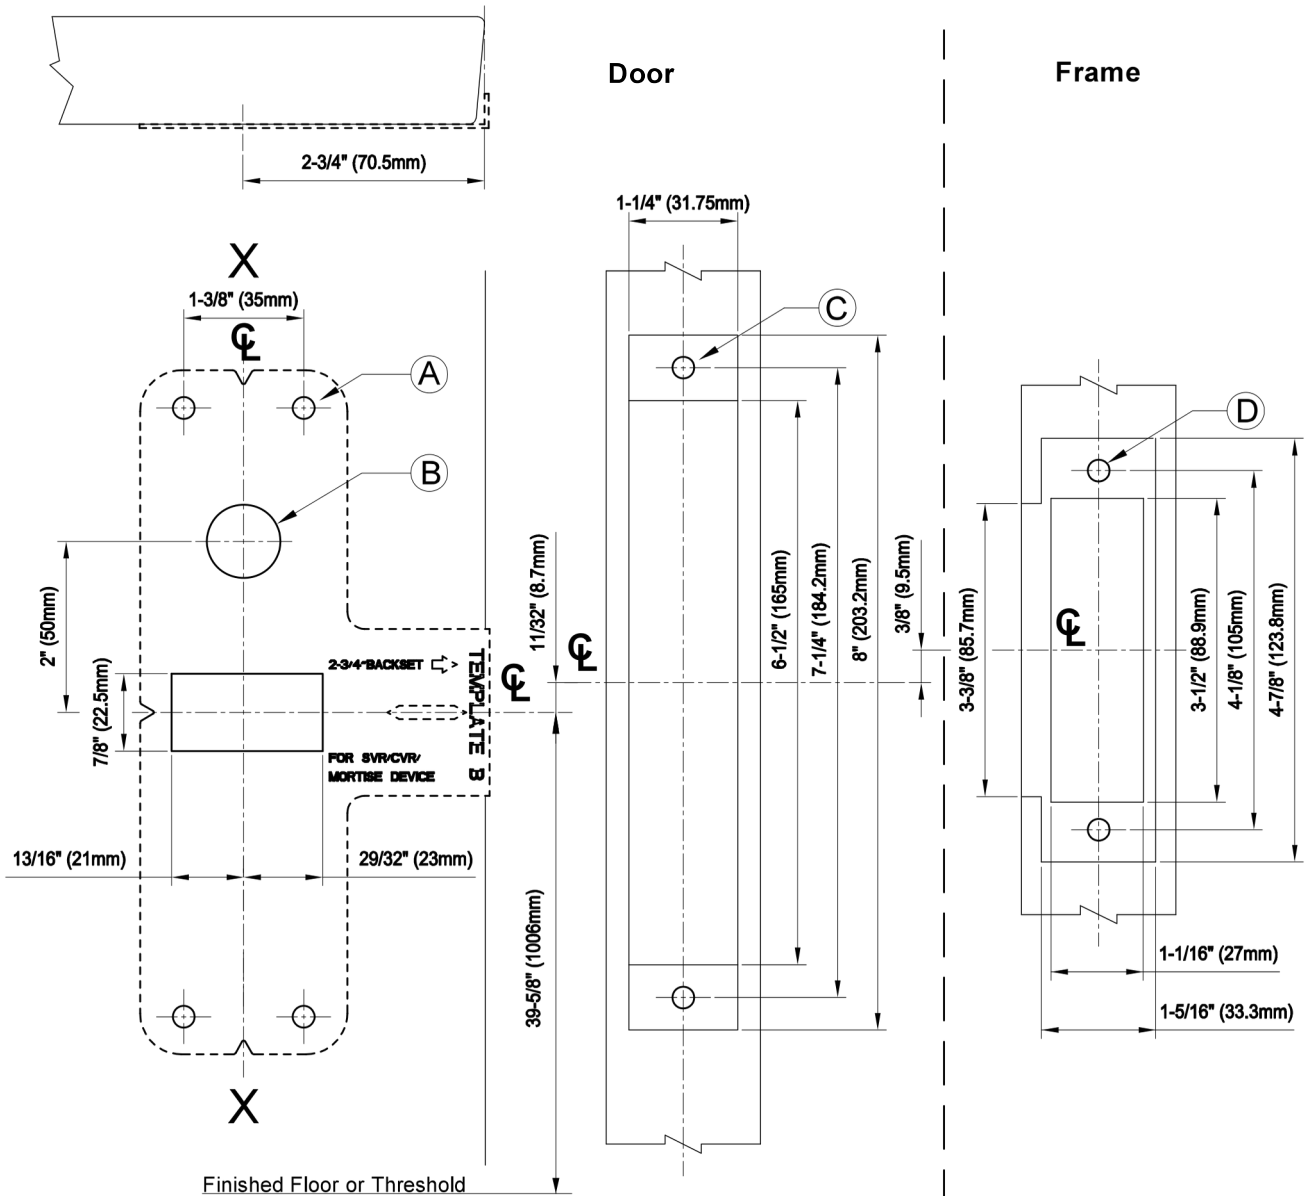

Notation	Illustration	Applications	Dimension	
			Metal	Wood
A	○	Exit Only	#25 Drill #10-24 Tap	1/8" (3mm) Drill Pilot 1" Deep
		Sex Bolt or Trim	1/4" (6mm) Drill (Device Side) 13/32" (10.3mm) Drill (Trim Side)	
B	○	Double Cylinder	7/8" (22mm) Drill (Cut Device Side Only)	
C	○	Mortise Lock Case	#16 Drill #12-24 Tap	5/32" (4mm) Drill Pilot 1" Deep
D	○	Strike	#16 Drill #12-24 Tap	5/32" (4mm) Drill Pilot 1" Deep